



Dear Customer, thank you for your trust and for purchasing this Wunderlich product.



This installation guide will assist you in the safe and proper installation of your product.

Important Note

Please read this guide completely before starting the installation.

Support

If you have any questions during the installation, please contact our support before beginning the work:

Tel.: +49 2641-3082-240

E-Mail: support@wunderlich.de

We wish you much enjoyment with your Wunderlich product and always a safe ride.


Your #TeamWunderlich




#14631-002

Wunderlich®

Topcase-Rack

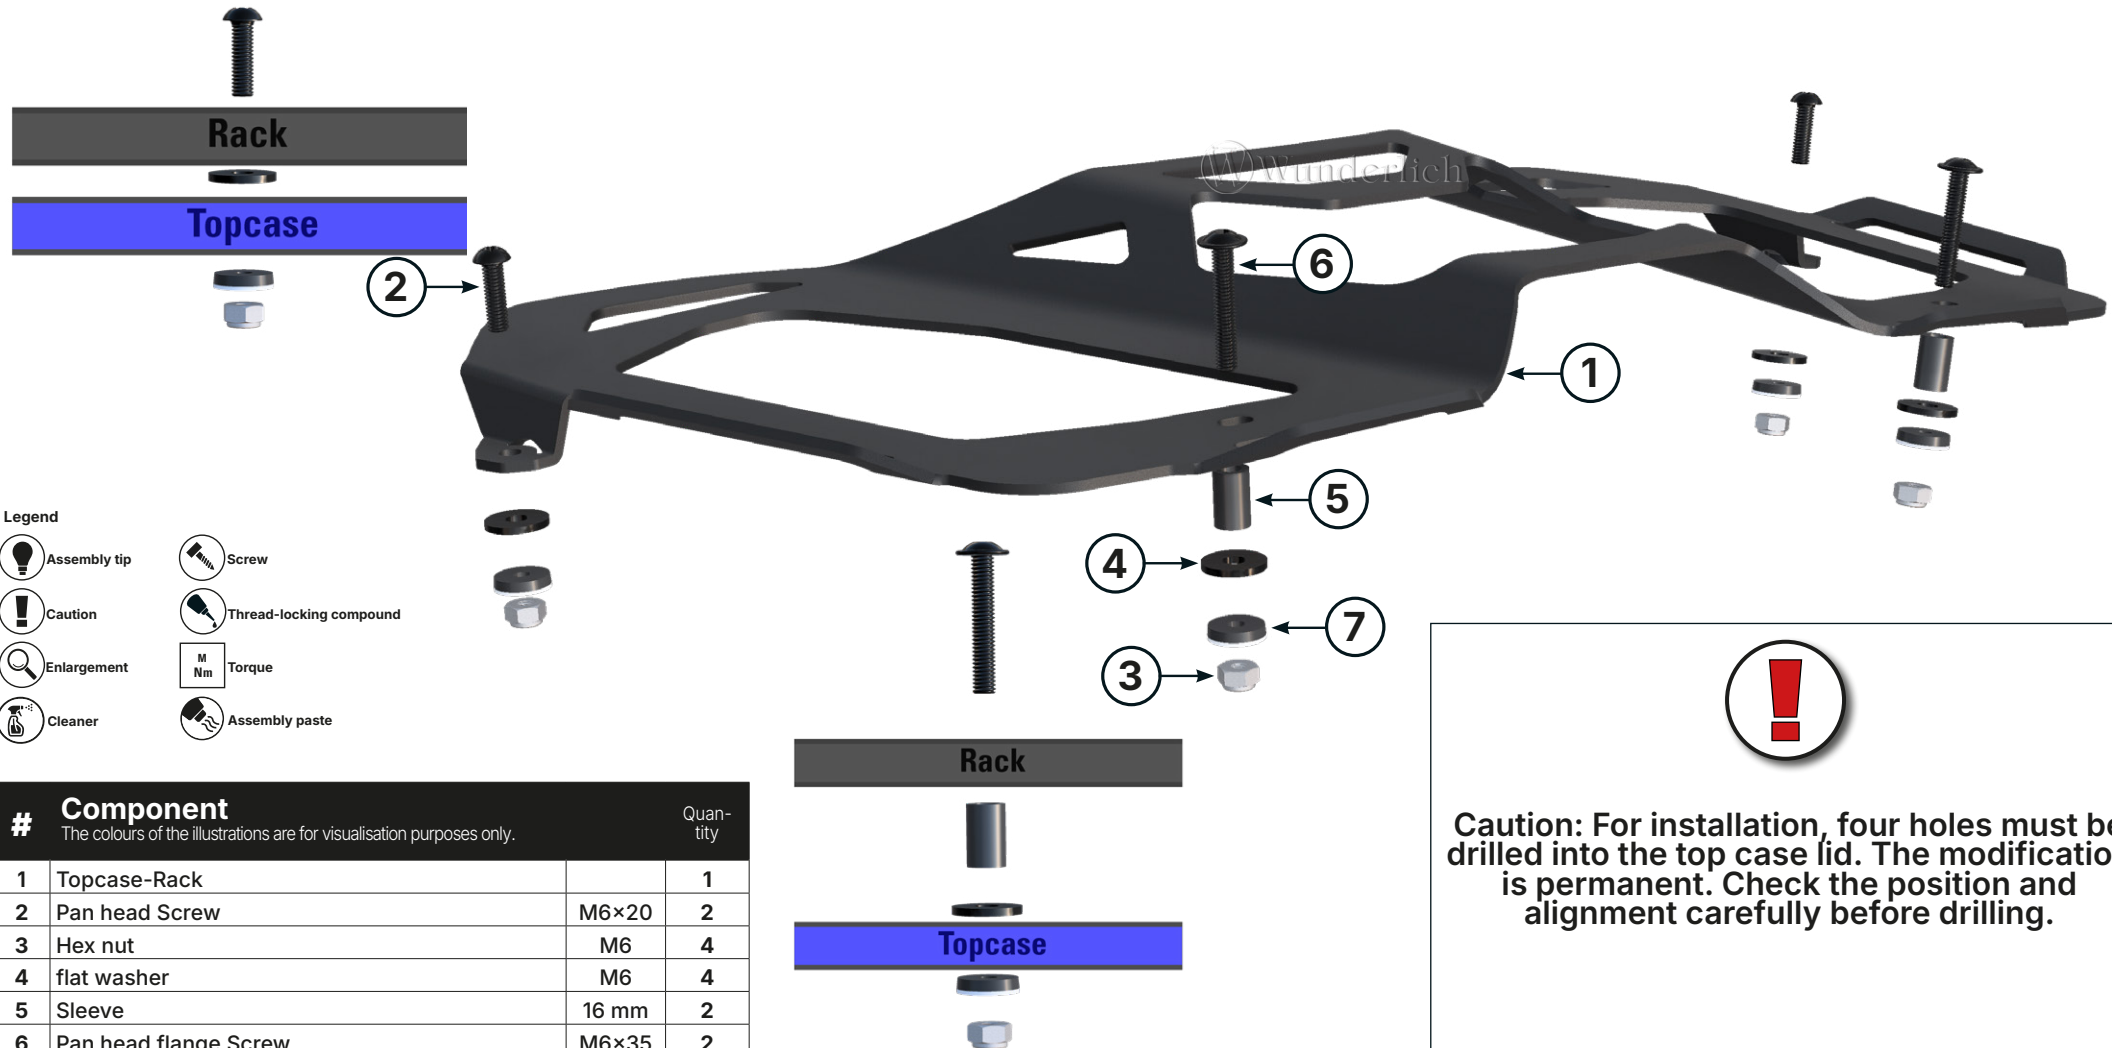

Legend

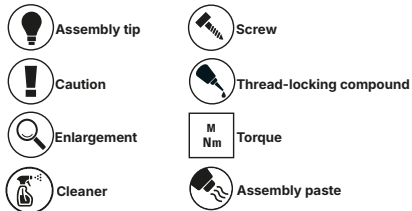

#	Component	Quantity	
The colours of the illustrations are for visualisation purposes only.			
1	Topcase-Rack		1
2	Pan head Screw	M6×20	2
3	Hex nut	M6	4
4	flat washer	M6	4
5	Sleeve	16 mm	2
6	Pan head flange Screw	M6×35	2
7	Sealing washer	M6	4




Caution: For installation, four holes must be drilled into the top case lid. The modification is permanent. Check the position and alignment carefully before drilling.



Cover the contact surfaces of the rack generously with tape.



Align the rack as shown. Make sure it sits straight and does not protrude anywhere.

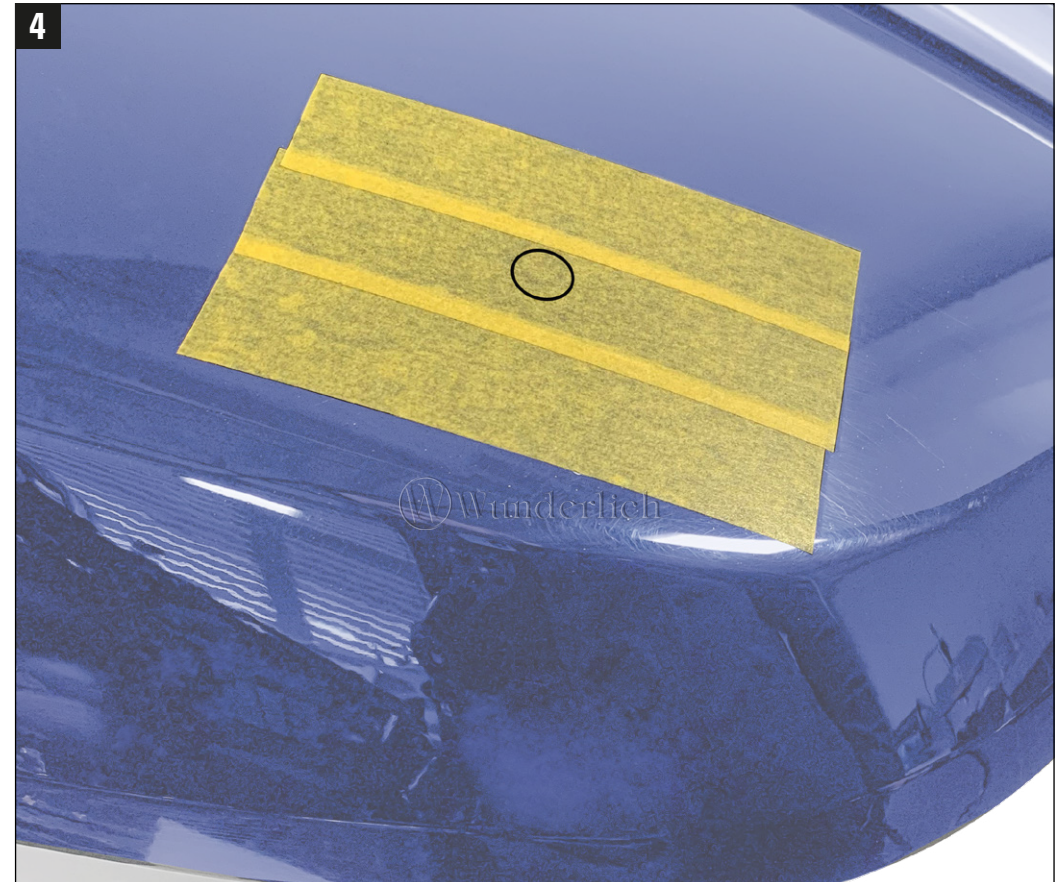


5





The drill holes must not be in the hatched area!

6

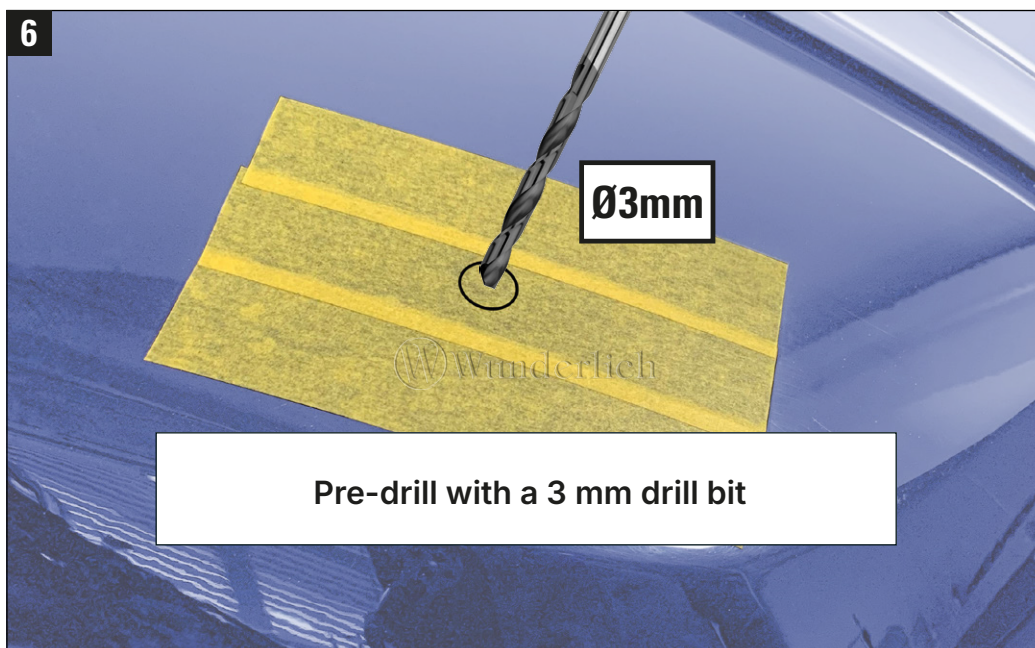

7

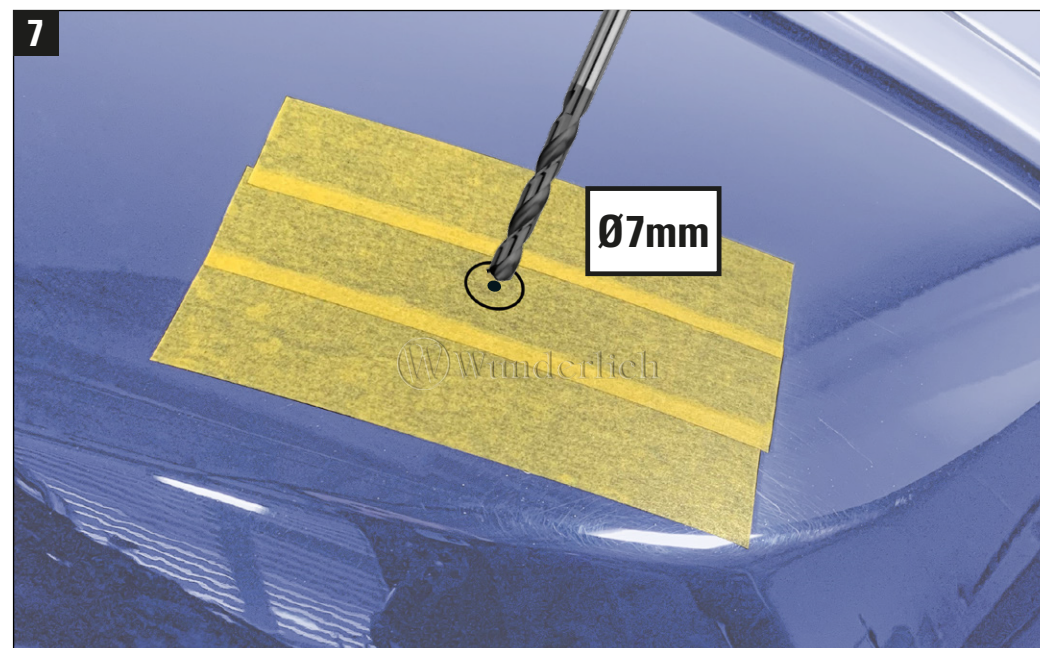

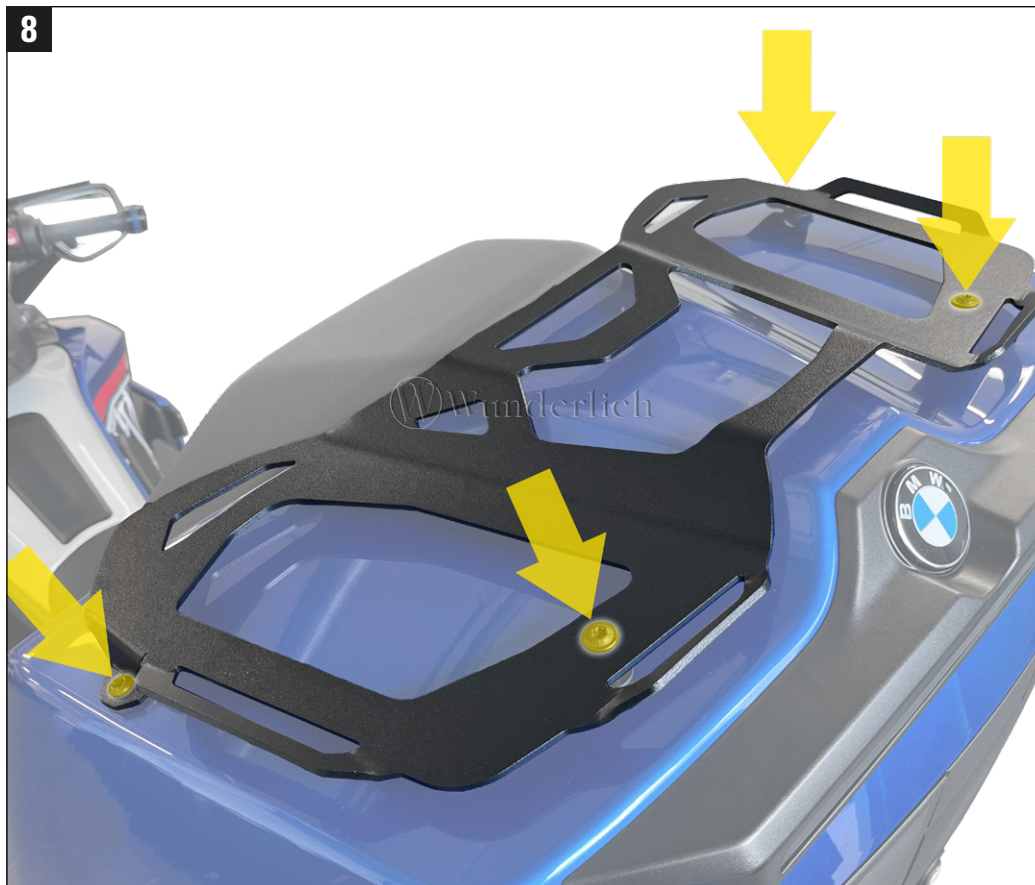

Warning: We expressly point out that the load condition of the rack can have a very strong influence on the handling of your motorcycle! The total load of the top case including the rack must not exceed the load limit specified by the top case manufacturer! The maximum payload of the rack is 2 kg.