

HINTERRADABDECKUNG

Rear hugger | Parafango posteriore | Carenatura posteriore | Protection roue arrière | Cubierta trasera

Art.-Nr: **20481-000**



#	BEZEICHNUNG / DESCRIPTION	DIN	ISO	MENGE AMOUNT
1	Stufenhülse / <i>grade sleeve</i>			1
2	Linsenflanschschraube / <i>lens head screw</i> M6 x 20 (8Nm)		7381SA2	5
3	U-Scheibe / <i>washer</i> M6	9021	7093	3
4	Halteblech / <i>bracket</i>			1
5	Hinterradabdeckung / <i>rear hugger</i>			1
6	Gummizuschnitt (selbstklebend) / <i>foam rubber</i>			14cm
7	Lackschutzfolie / <i>protective film</i>			40cm

LEGENDE/KEY



Anbau Tip
Fitting tip



Achtung
Attention



Vergrößerung
Magnification



Montagepaste
Fitting lubricant





Schraube
Screw




Schraubensicherung
Thread locking fluid



Drehmoment
Torque

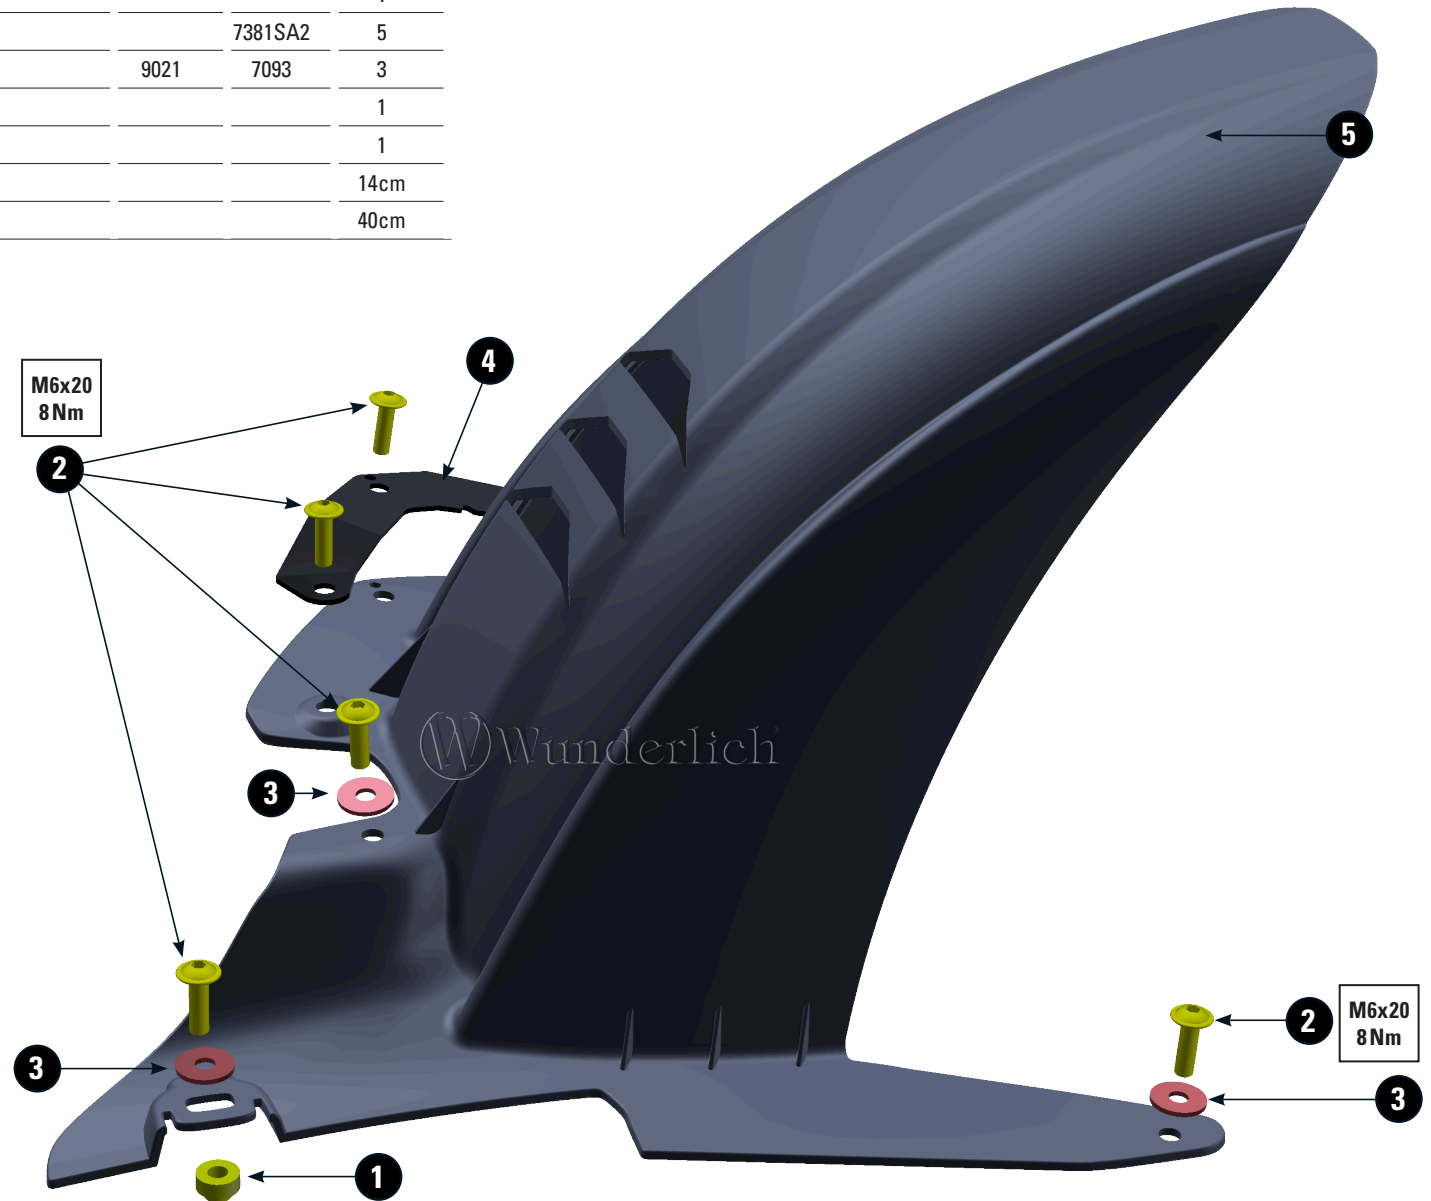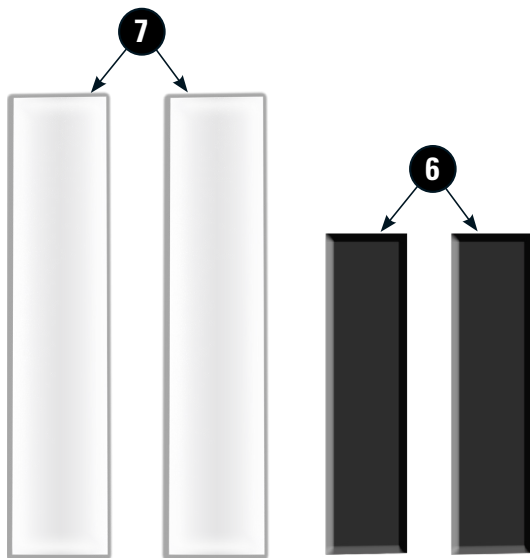



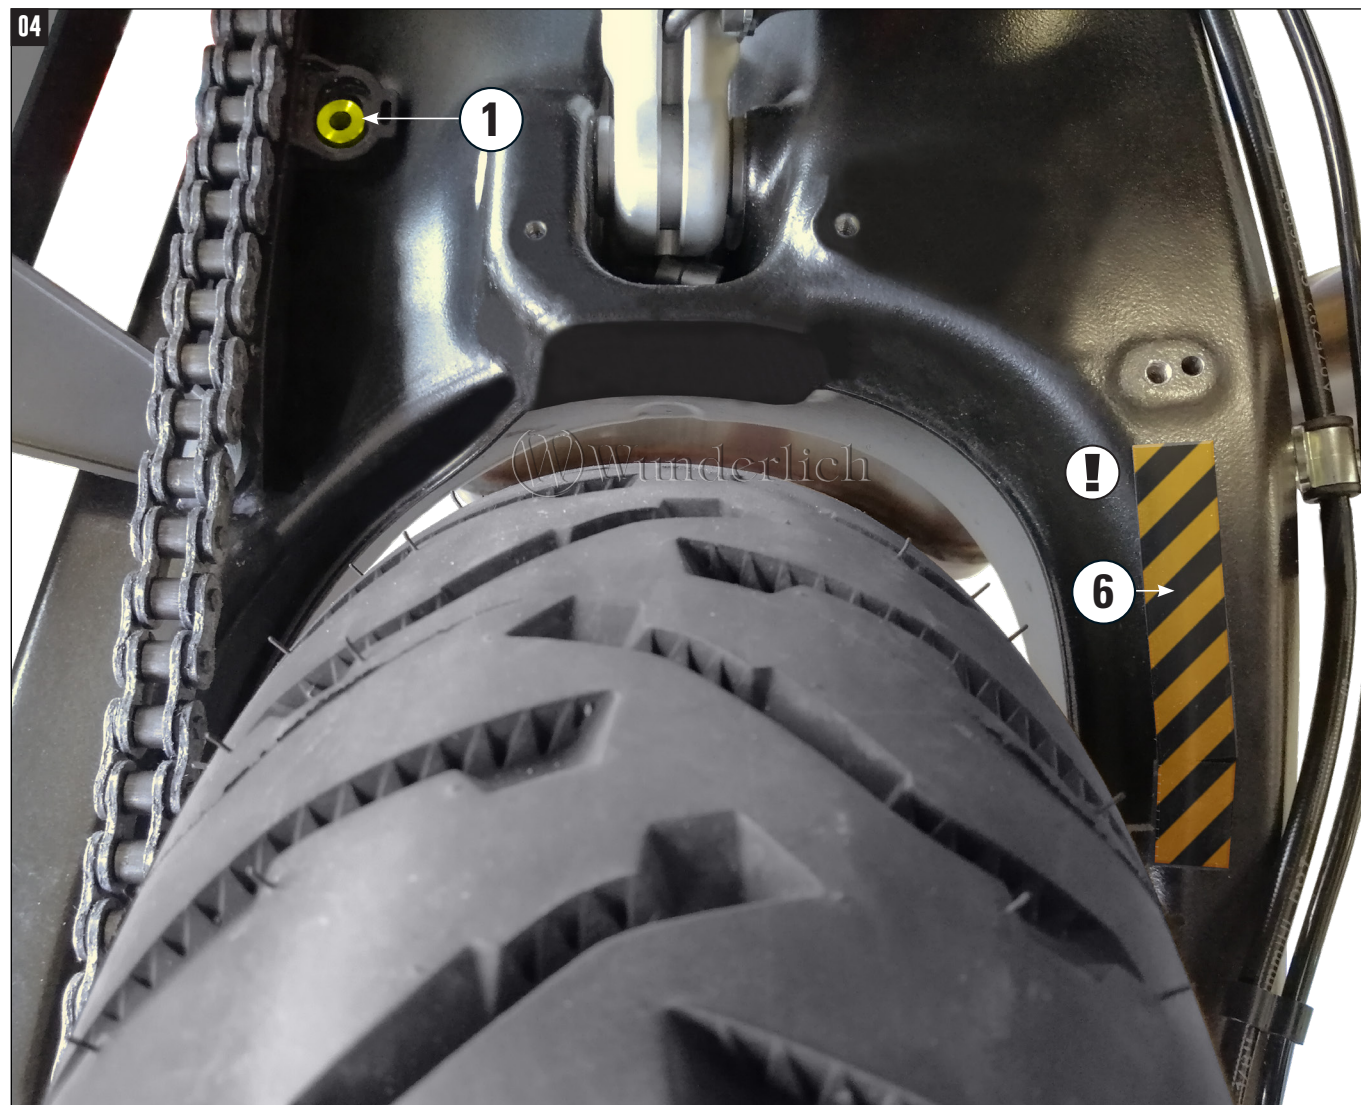

Schwinge an der markierten Stelle (Bild 04) mit dem beiliegendem Gummizuschnitt (6) bekleben.

Stick the foam rubber (6) to the swingarm in the position as shown in picture no. 4.

Weitere Anlageflächen mit Lackschutzfolie (7) bekleben.

Cover further points of contact on the swingarm with the protective film (7).

