



Lampenmaske



Headlight fairing



Carena per faro




Carénage de phare



Careando frontal

Art.Nr.: 30471-xxx

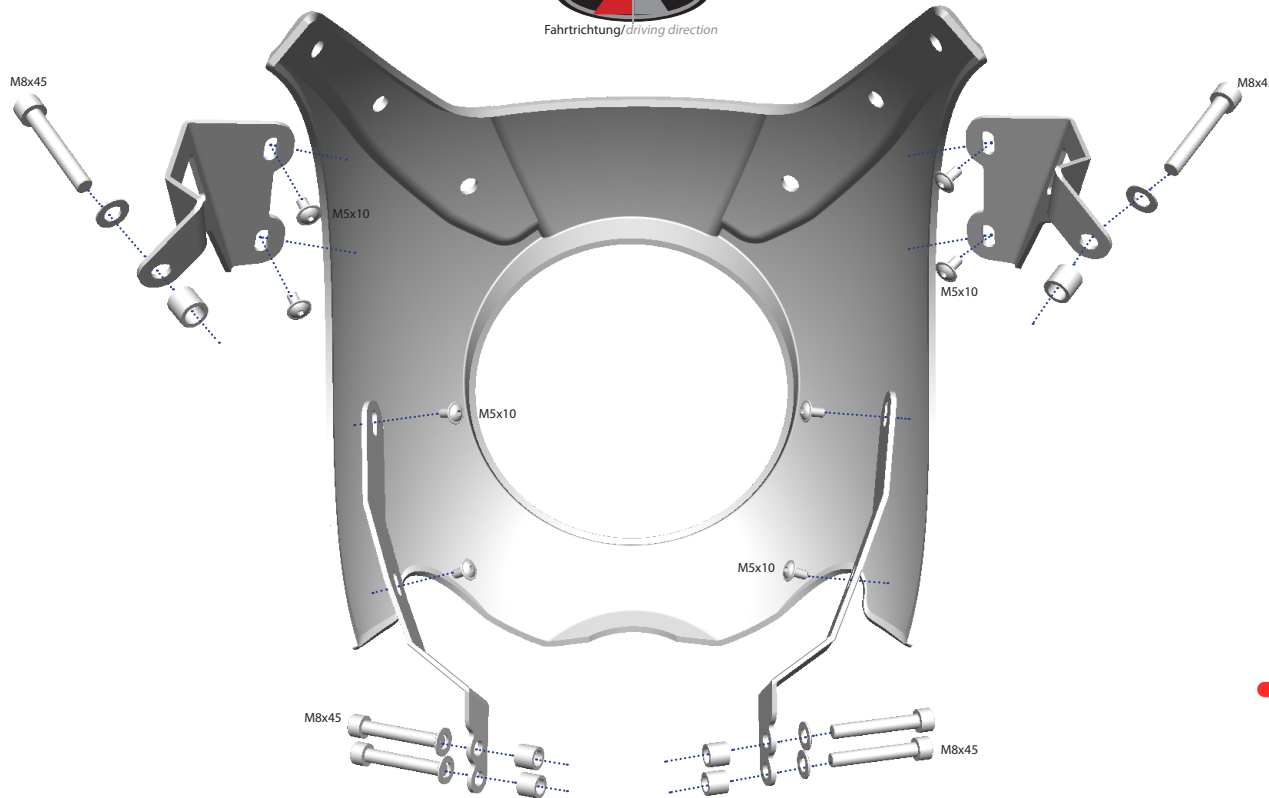

R NINE T, SCRAMBLER AND PURE!

MOUNTING R NINE T, SCRAMBLER AND PURE IDENTICAL!
ATTENTION: WHILE INSTALLING, ONLY INSTALL ONE SIDE AT A TIME. DO NOT LOOSEN ALL FOUR PINCH BOLTS AT THE SAME TIME.

