



#30483-00x

Wunderlich®



Windshield



4



If Wunderlich indicator protection bars are fitted,
the 3 mm sleeves are omitted.

6



If the factory-fitted equipment carrier is installed,
the 2 mm sleeves are omitted.

7



If not factory-fitted, use the enclosed sheet metal nuts.

Windshield

Legend



Assembly tip



Attention



Enlargement



Cleaner



Screw



Threadlocker




Torque



Assembly paste

#	Component	Quantity	
The colours of the illustrations are for illustration purposes only.			
1	Windshield		1
2	Bracket		1
3	Lens head flange screw	M6×25	2
4	Sleeve	3 mm	2
5	Lens head flange screw	M5×16	2
6	Sleeve	2 mm	2
7	Sheet metal nut		2

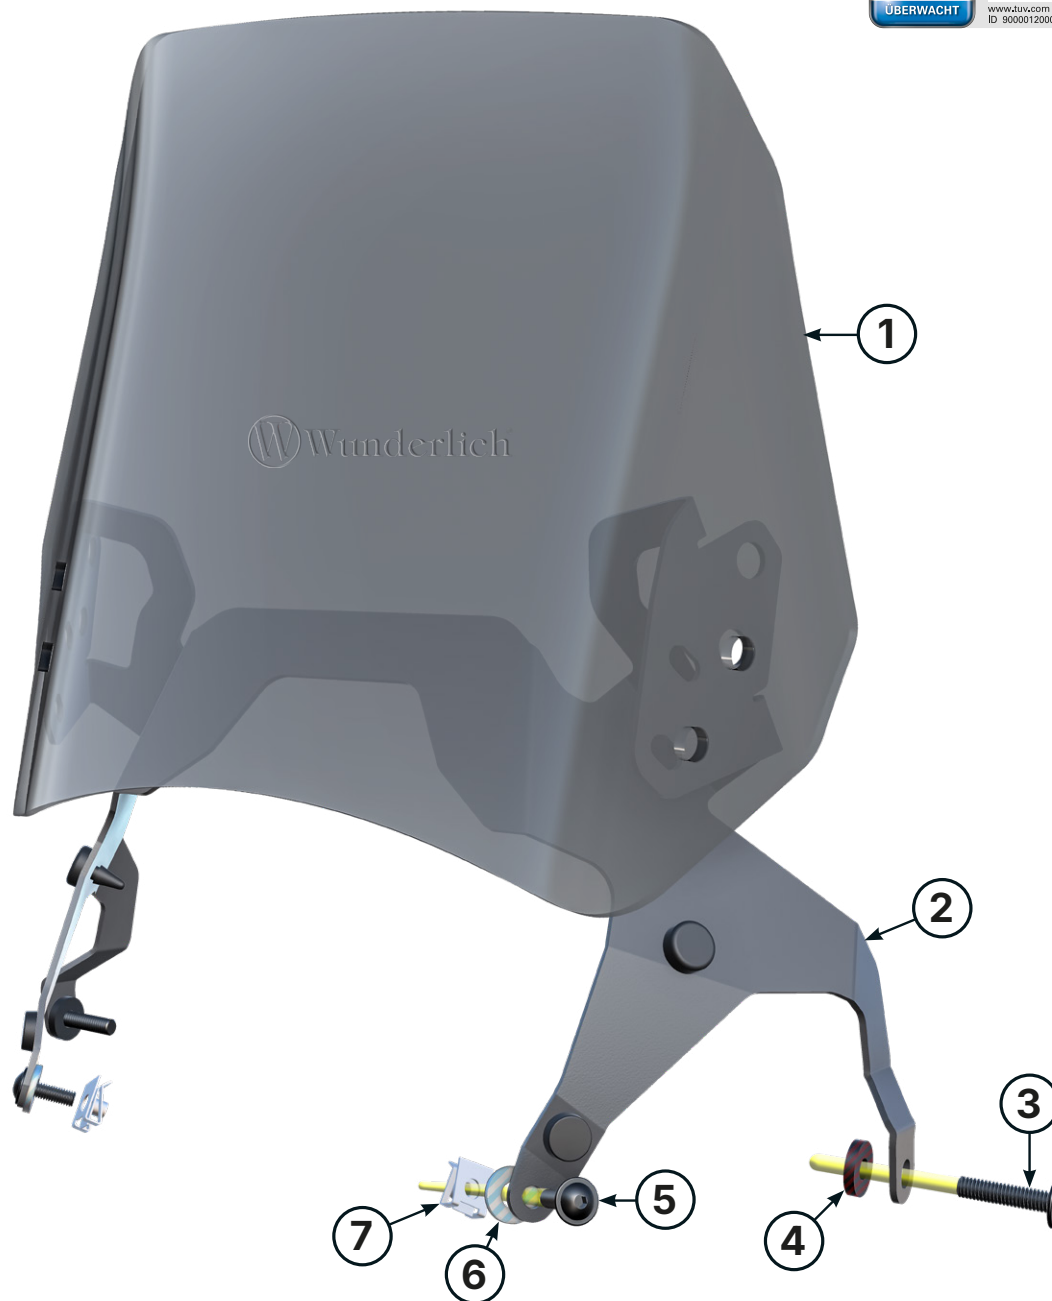

31.03.2026




Screen tilt adjustment range




High installation position



Low installation position

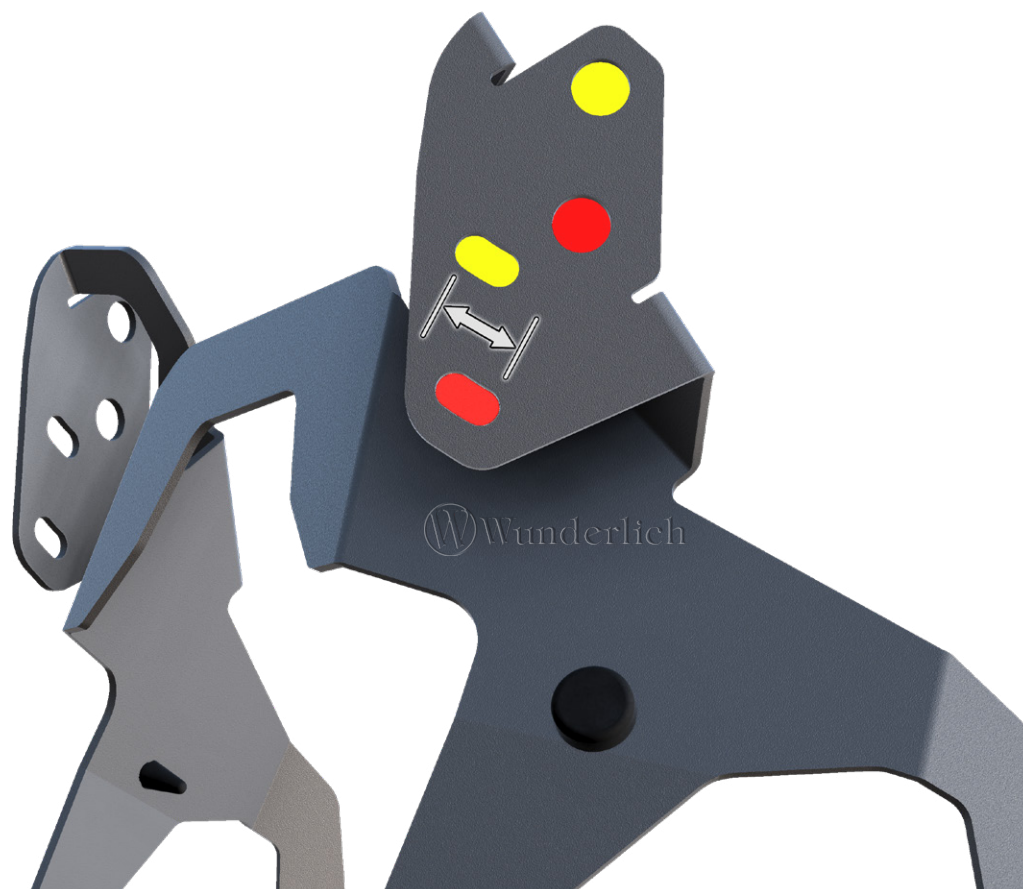

#	Component		Quantity
The colours of the illustrations are for illustration purposes only.			
8	Lens flange screw	M5×20	2
9	Flat washer	M5	4
10	Rubber grommet		4
11	Stepped sleeve		4
12	Insert nut	M5	2
13	Lens flange screw	M5×18	2
14	Hexagon nut	M5	2

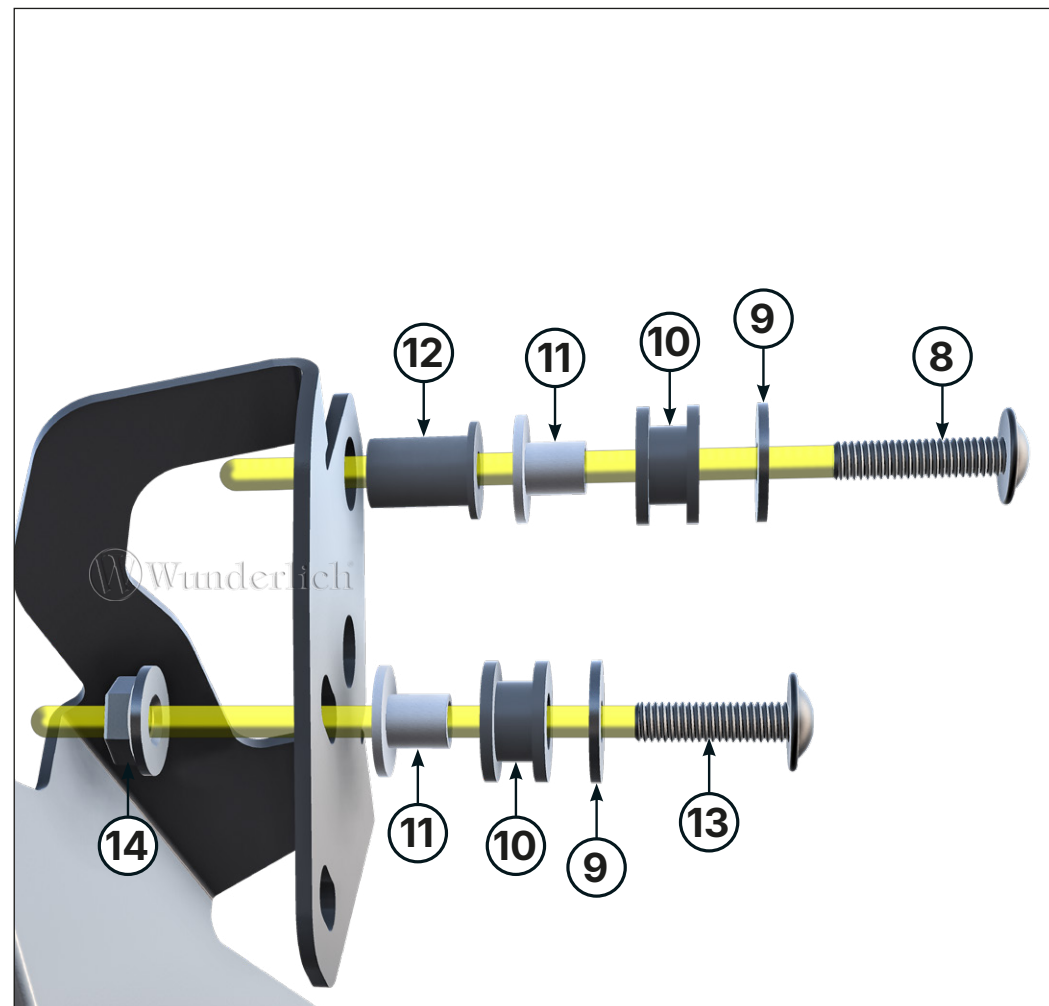

1



2






3




4



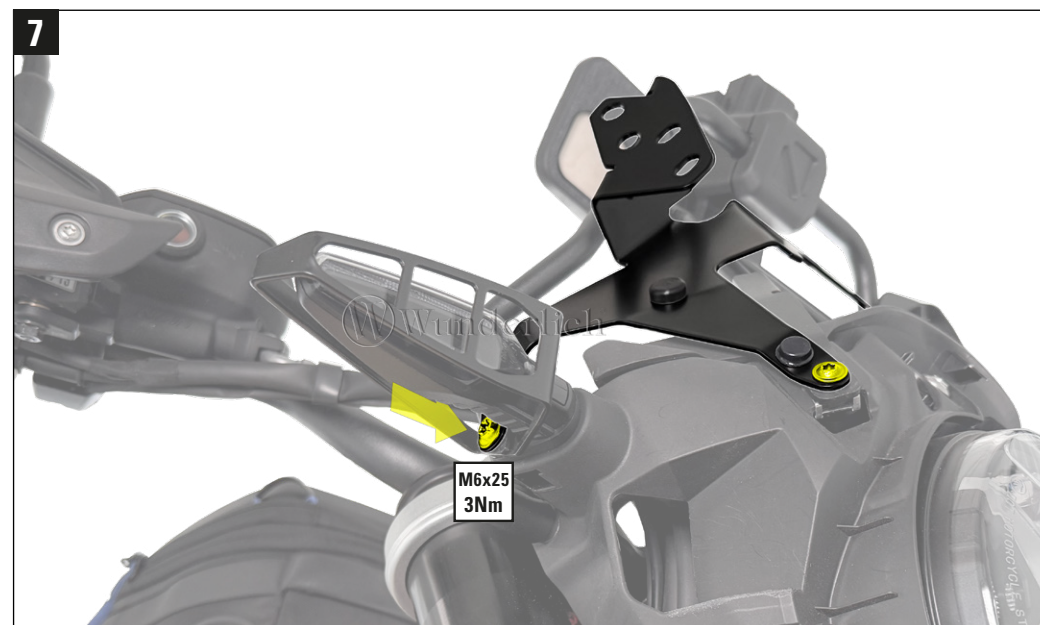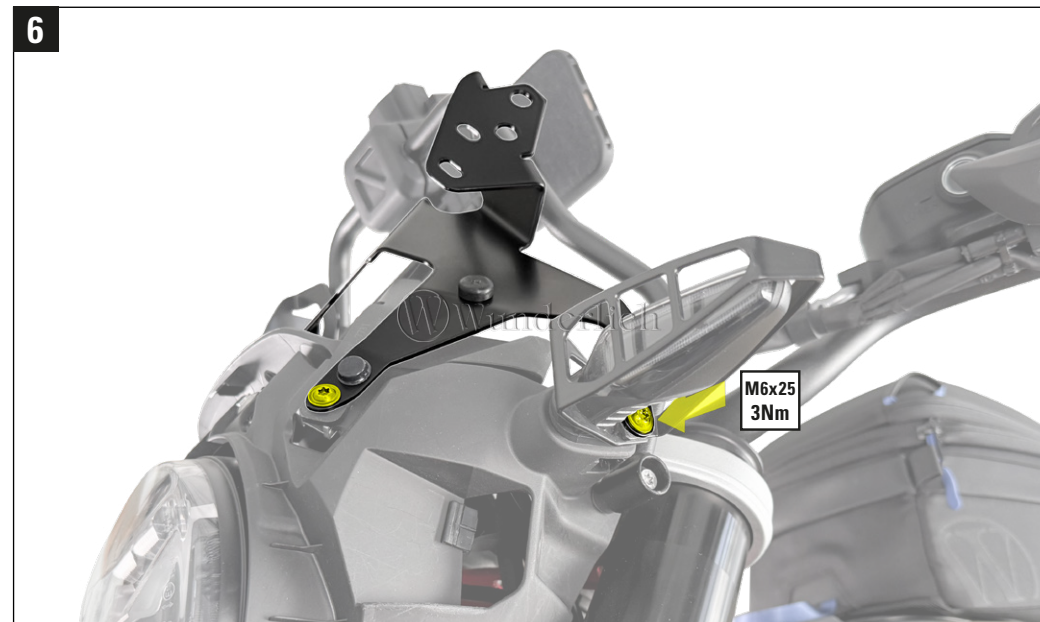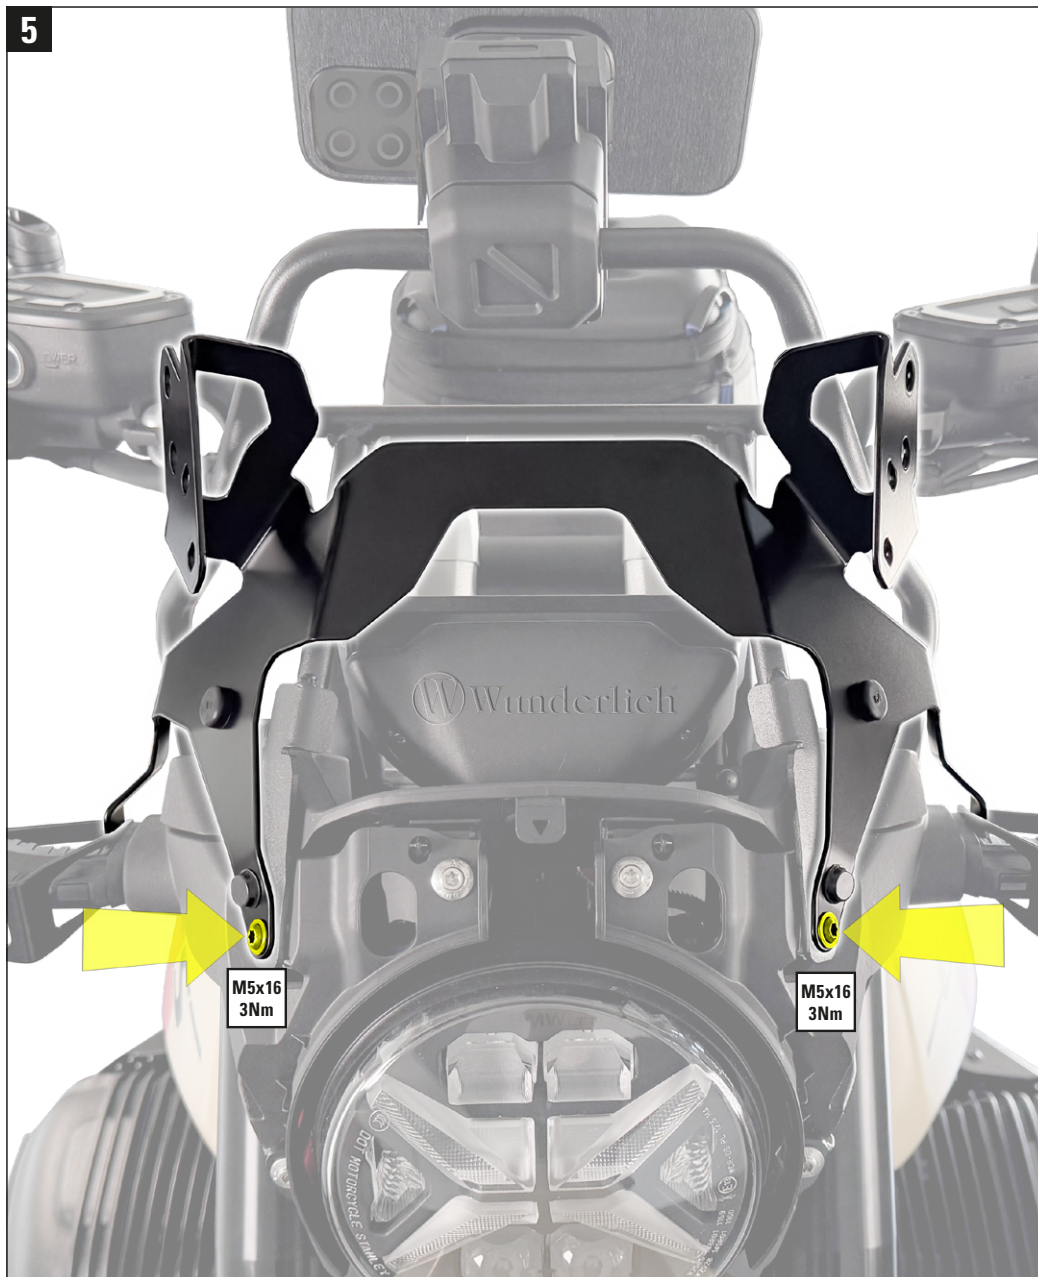

8

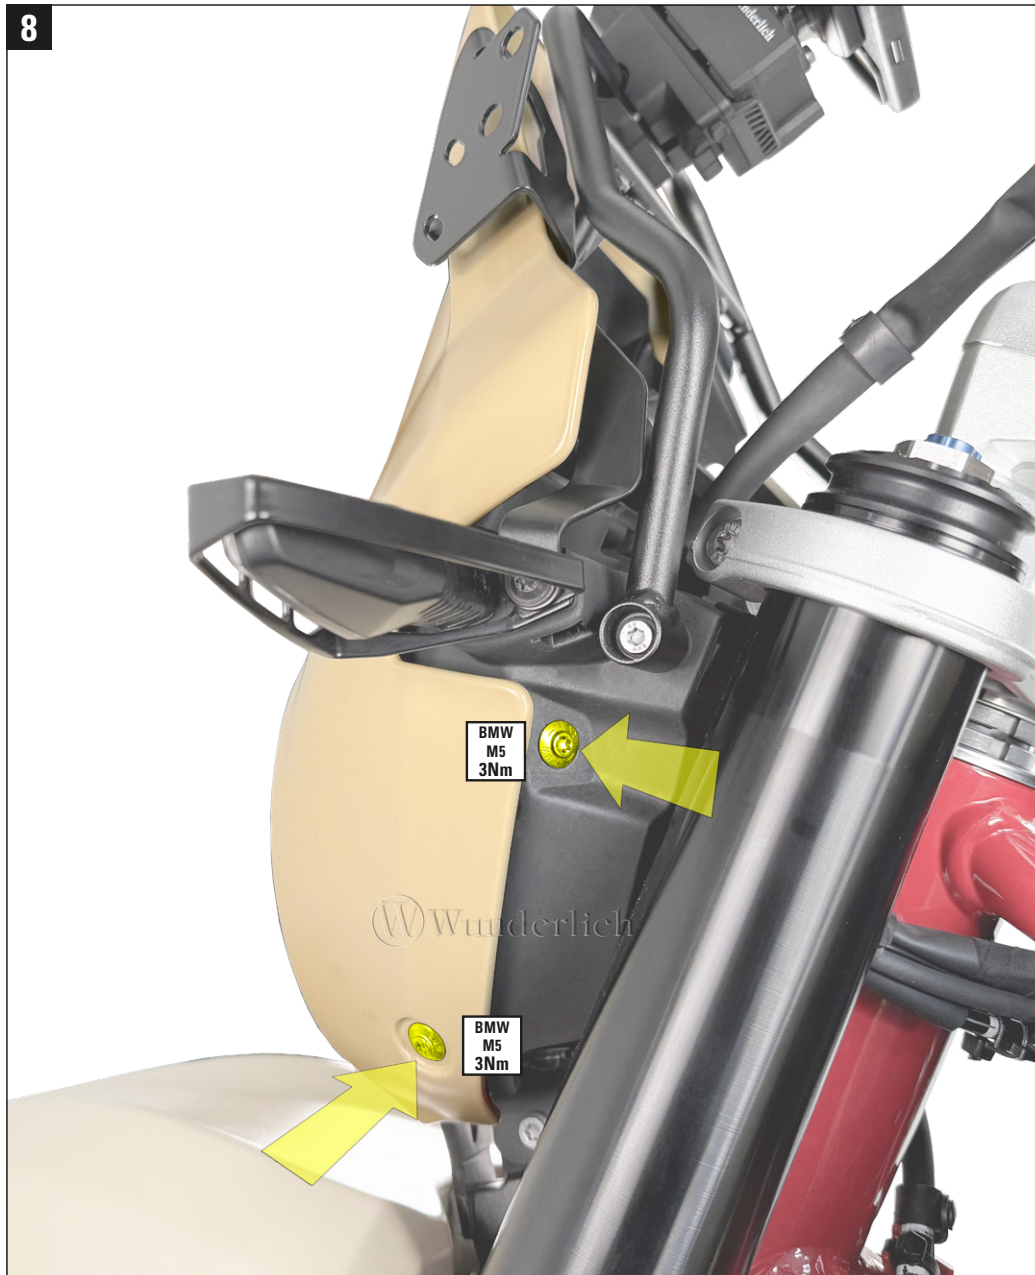

9

