

BMW K 1600 GTL Case protection bar

powered by

Item-No.: 502.601 00 01 black

Item-No.: 502.601 00 02 chrome

Assembling instructions

The kit includes the following parts:

Quant	item no.	description
1	700007712	protection bar left
1	700007713	protection bar right
4	151.286	alu spacer Ø15xØ9x20mm
4	151.302	countersunk washers ø8,4 x ø25mm
4	150.913	countersunk head allen screw M8x50



BMW K 1600 GTL Case protection bar

powered by

Item-No.: 502.601 00 01 black

Item-No.: 502.601 00 02 chrome



Assembling instructions

right side

Fastening top: ①
with countersunk head allen screw M8x50
and countersunk washers Ø8,4.
Sandwich aluspacer Ø15xØ9x20mm
between crash bar and exhaust holder.

Fastening bottom: ②
at the exhaust bolting with original screw.

Control and choose position so, that the
cases can be opened easily.

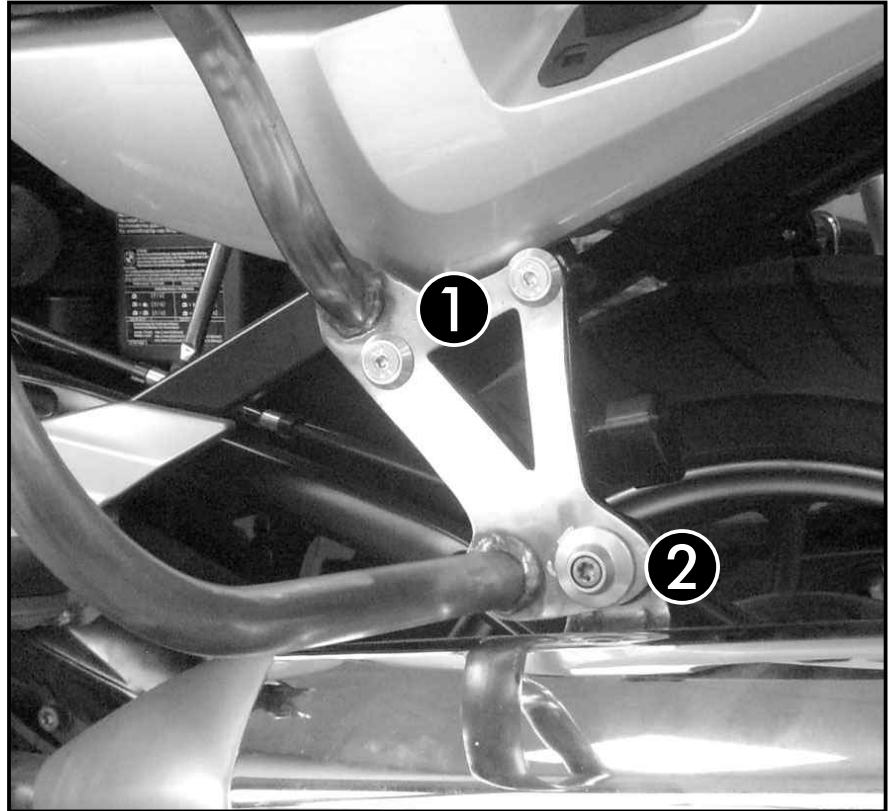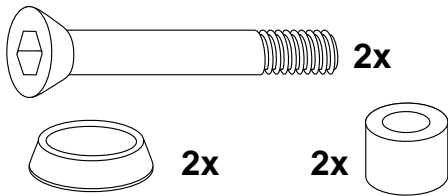

left side

Fastening top: ①
with countersunk head allen screw M8x50
and countersunk washers Ø8,4.
Sandwich aluspacer Ø15xØ9x20mm
between crash bar and exhaust holder.

Fastening bottom: ②
at the exhaust bolting with original screw.

Control and choose position so, that the
cases can be opened easily.

