



Dear Customer, thank you for your trust and for purchasing this Wunderlich product.



This installation guide will assist you in the safe and proper installation of your product.

Important Note

Please read this guide completely before starting the installation.

Support

If you have any questions during the installation, please contact our support before beginning the work:

Tel.: +49 2641-3082-240

E-Mail: support@wunderlich.de

We wish you much enjoyment with your Wunderlich product and always a safe ride.



Your #TeamWunderlich




#40320-001

 Wunderlich®


Handlebar riser

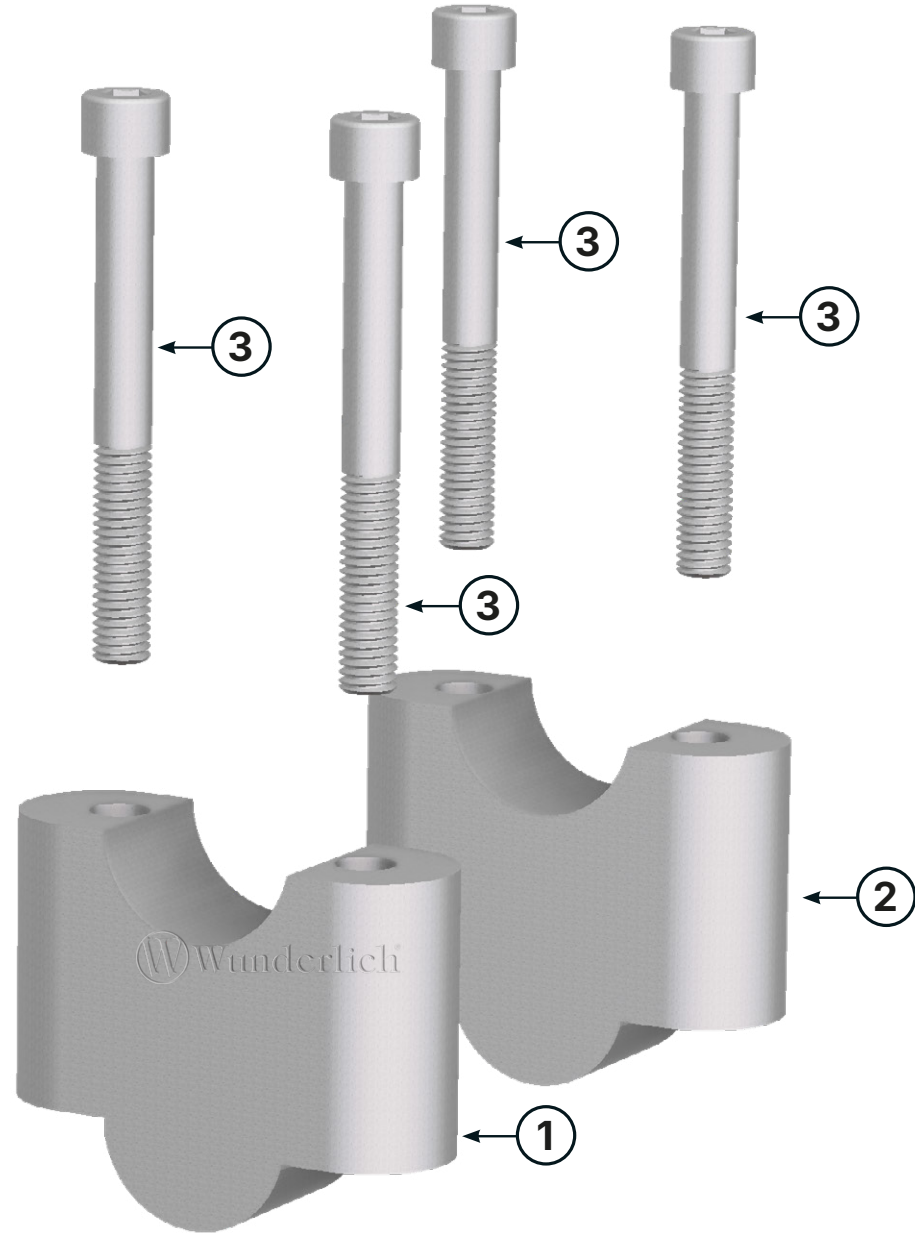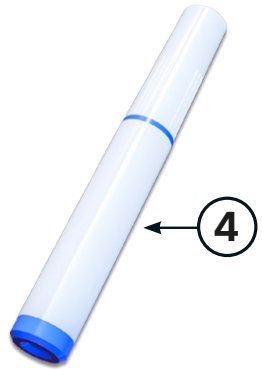



Legend

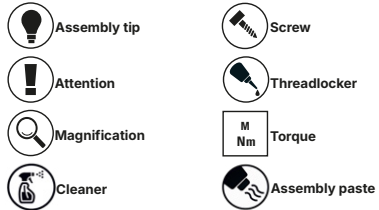

#	Component	Quantity	
The colours of the illustrations are for visualisation purposes only.			
1	Handlebar riser left		1
2	Handlebar riser right		1
3	Hexagon socket head screw	M8×70	4
4	Thread locker		1

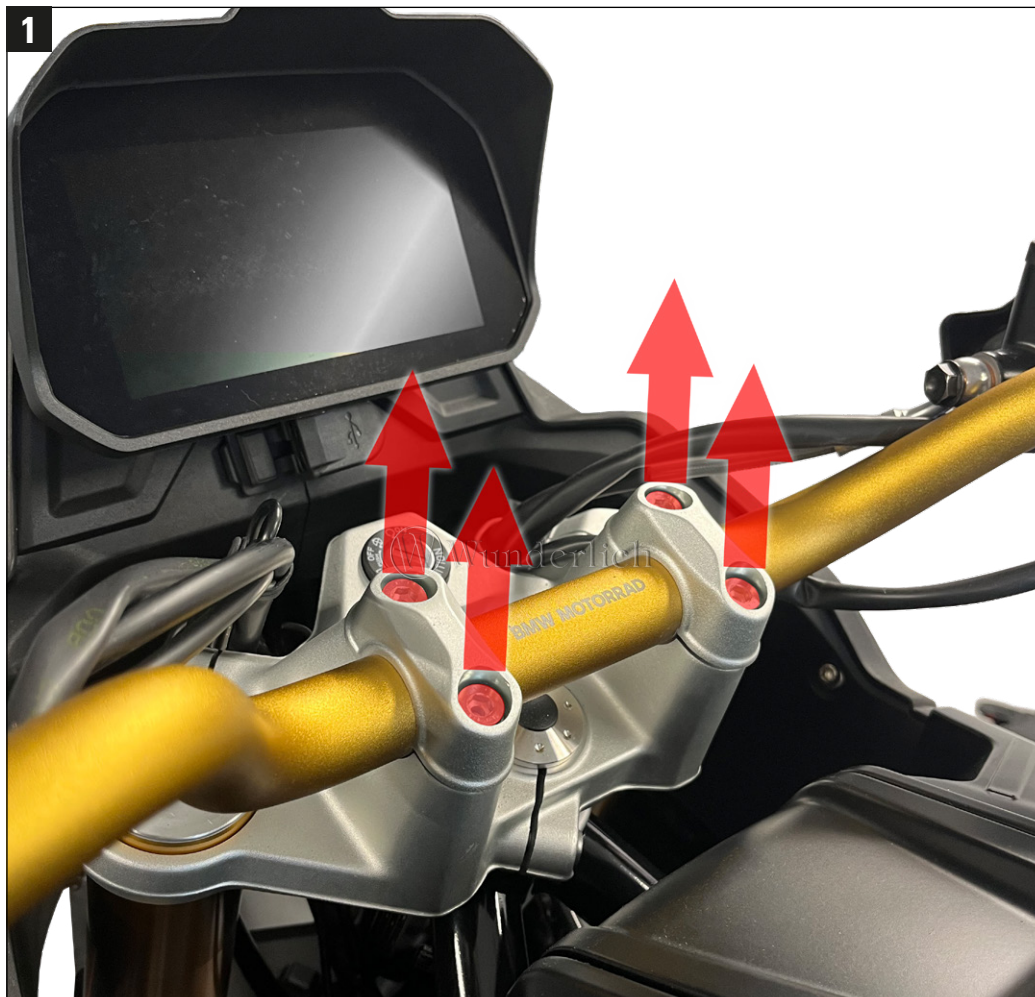

Before fitting, adequately protect the fairing and the tank.
Remove the handlebar and set it down towards the rear.

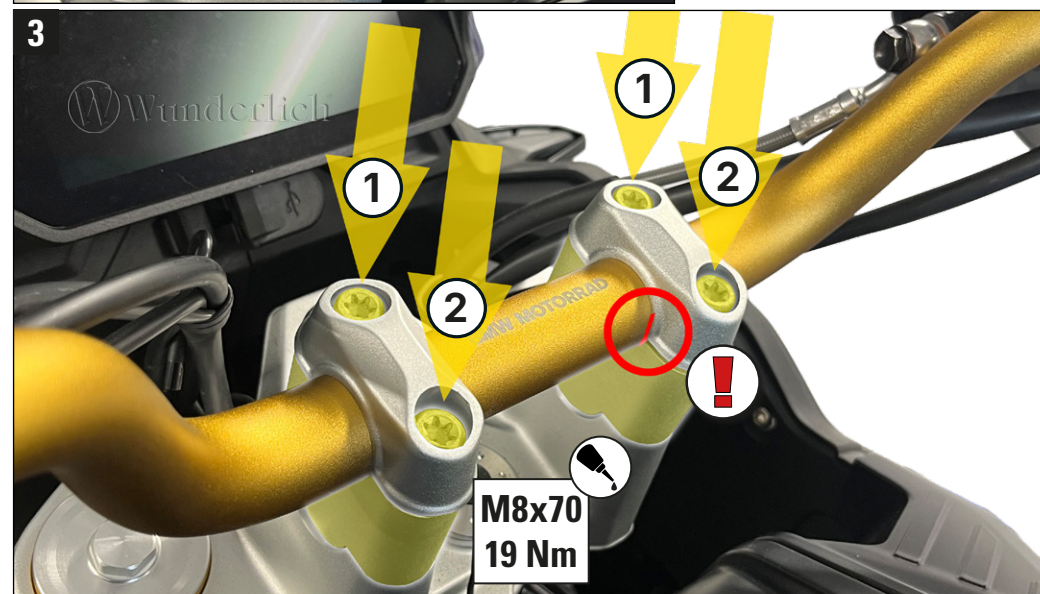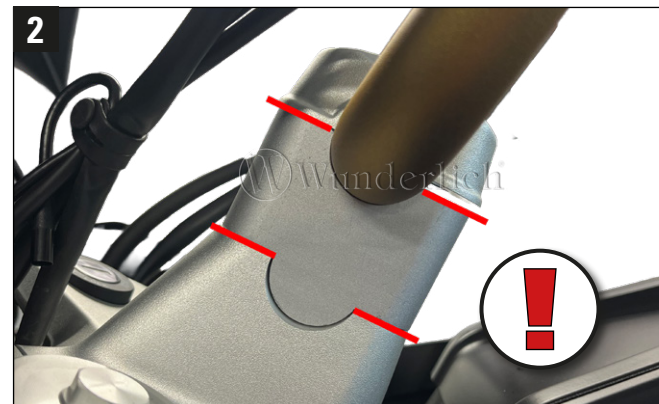

Align the handlebar using the marking!
Tighten the screws in sequence 1 - 2.
Check that the **steering moves freely!**