


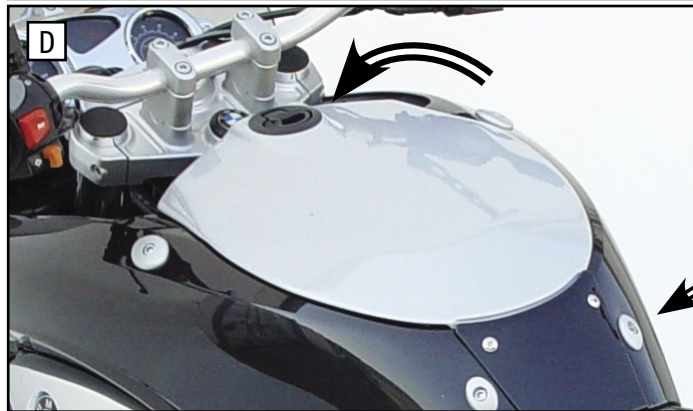


**Vielen Dank für Ihr Vertrauen zu unserem Produkt.**

1.  Setzen Sie das Schloss in die Abdeckung und schrauben Sie dieses von innen fest (Abb. A).
2. Kleben Sie nun das beiliegende Mossgummi von innen, an den Aussenrändern der Abdeckung auf, wie in Abbildung (B) ersichtlich.
3. Setzen Sie die Abdeckung hinten ein (Abb. C) und lassen Sie sie vorne einrasten (Abb. D). Prüfen Sie die Funktionsfähigkeit des Schlosses und den korrekten Sitz des Bay-Covers.
4. Nach der Montage entfernen Sie bitte die Schutzfolie.  
**Hinweis: Die Abdeckung kann wie ein normales Lackteil gereinigt und gepflegt werden. Verwenden Sie aber niemals aggressive Reinigungsmittel wie Verdünnung etc.**

**Thank you for purchasing our product.**

1.  To insure a sure fit, please follow these instructions.
2.  Install the lock mechanism to the bay cover as shown (Image A).
3. Cut and apply suitable pieces the supplied soft rubber foam pads to the inside of the cover (Image B)
3. The cover can now be installed on the bike. Push the rear part of the cover in first (Image C), and then push it down at the front (Image D). Make sure the lock "clicks" into position correctly. Where the cover mounts up at the top portion of the stuff bay, there is a rubber piece on the bike that may need to be pulled out if the lock will not engage correctly.
4. Remove the thin protective foil from the outside of the cover.  
**Note: The cover can be cleaned in the same way as the painted parts of the motorcycle. Never use any abrasive or caustic cleaners such as paint thinner, etc.**



Hinweis: Der „Blendstopfen-Set F650CS“ (nicht im Lieferumfang enthalten) ist optional erhältlich, sofern Sie die originalen Tankbügel demontieren möchten (Best.Nr. 8160536).

Note: The „Aluminium Cap Set“ shown in these pictures (not included, part number 8160536.) is only needed if you wish to permanently remove the original tank mounted grab rails.