

MOTOPLASTIC, S.A.

Molí de la sal, 1 - 08403 Granollers (Barcelona) SPAIN

Tel. 34 93 849 06 33 - Fax 34 93 849 09 88

info@puig.tv

www.puig.tv


INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS

GUARDABARROS TRASERO ADAPTABLE A - REAR MUDGUARD ADAPTABLE TO


BMW R1200R - R1200S

Ref.: 5861 N
(color negro/black colour)


Ref.: 5861 C
(color carbono/carbon look)

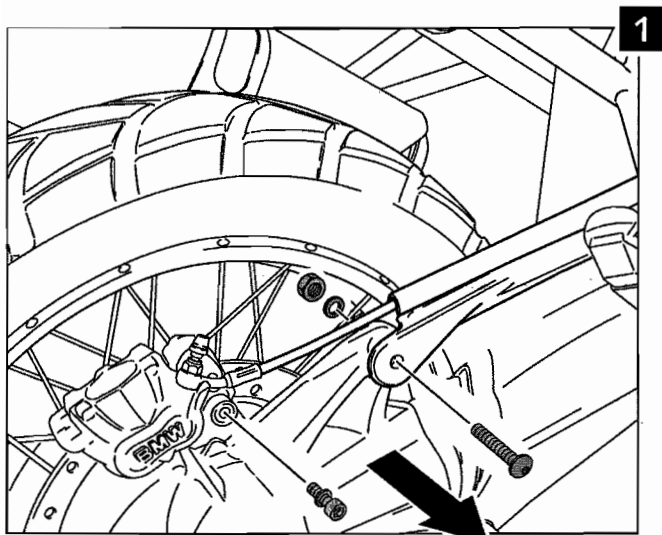


1

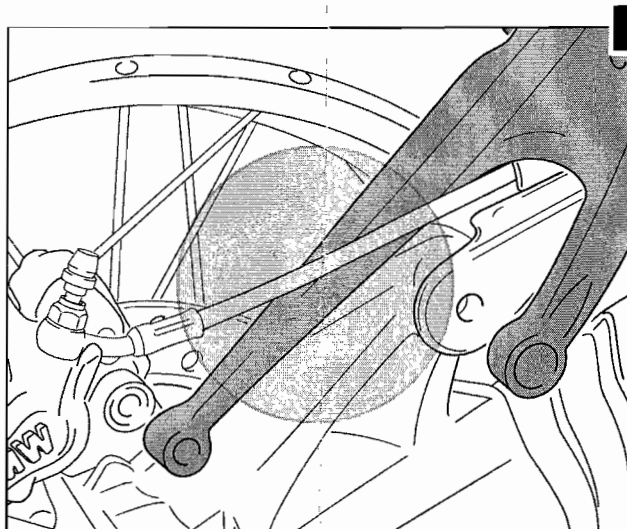

2

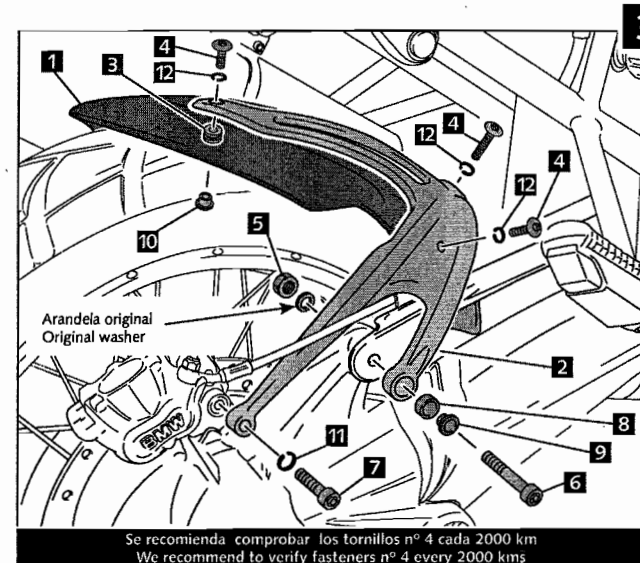

3

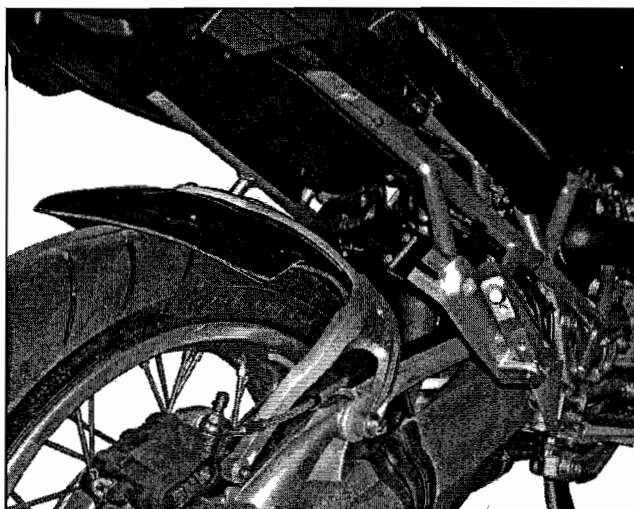

| ID. | DESCRIPCIÓN | DESCRIPTION | QTY. |
|-----|---|--|------|
| 1 | Guardabarros | Mudguard | 1 |
| 2 | Soporte | Support | 1 |
| 3 | Silemblock | Well nut | 3 |
| 4 | Tornillo Allen M5x11 ISO 7380 | M5x11 ISO 7380 Allen screw | 3 |
| 5 | Tuerca M10 autoblocante | M10 locknut | 1 |
| 6 | Tornillo Allen M10x75 DIN 912 12.9 | M10x75 DIN 912 12.9 Allen screw | 1 |
| 7 | Tornillo Allen M8x40 DIN 912 12.9 | M8x40 DIN 912 12.9 Allen screw | 1 |
| 8 | Casquillo de fricción IGUS Ø int. 15 x Ø ext. 17x15 | Arrowhead friction IGUS Ø inner 15 x Ø outer 17x15 | 1 |
| 9 | Casquillo con valona Ø int. 10,5 x Ø ext. 15x17,6 | Bush with flange Ø inner 10,5 x Ø outer 15x 17,6 | 1 |
| 10 | Casquillo con valona M5 | M5 bush with flange | 3 |
| 11 | Arandela glowler M8 | M8 glowler washer | 1 |
| 12 | Arandela glowler DIN 127 M5 | DIN 127 M5 glowler washer | 3 |

Se recomienda el empleo de un fijador medio (ej. Loctite) para asegurar la tornillería. Revisar el apriete de toda la tornillería después de los primeros 50 km.

Medium strength liquid thread-locker (i.e., "Loctite") should be used to secure all screws, bolts and nuts. All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque.