

Railing for original BMW top case
No.: 610.201

powered by



Assembling instructions

The kit includes the following parts:

| Quant | description | |
|-------|-----------------------|-----------------------------------|
| 1 | Railing | 4 rubber washer Ø15 x Ø6,5 x 3 mm |
| 4 | Hexagon screw M6 x 18 | 4 Body washer Ø18 x Ø6,5 x 1,5 mm |
| 4 | Plastic cap M6 x 25 | |

Maximum load 10kg!

Please note:

We expressly point out that the loading of the topcase railing can have a very strong influence on the driving behavior of the motorcycle!

Please note the max load specification of the manufacturer!



Railing for original BMW top case
No.: 610.201

Assembling instructions




1

Preparing:

Protect the bearing surfaces of the rails with masking tape over a large area. Position the rail on the Topcase as desired.

Mark the positions of the feet with a soft felt-tip pen or similar.

Remove the rails and drill in the middle of the marks with a small drill (\varnothing 3mm).




2

Control drilling position and rework, if necessary.

Drill holes on \varnothing 7mm and remove the masking tape.

Before installing, control the threads in the feet to be free of dirt, if necessary with the enclosed screws.

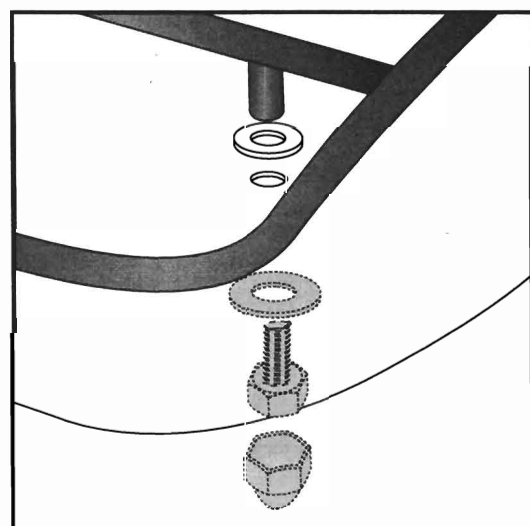

3


Fastening of the railing front:

Put the railing on the top case cover over the borings.

Sandwich the rubber washers \varnothing 7 x \varnothing 15 x 3 mm.

Inside top case cover use the hexagon screw M6 x 20 with body washers \varnothing 18 x \varnothing 6,5 x 1,5 mm.

Put plastic caps on the screws head.

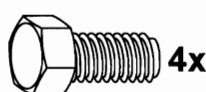

4x



4x



4x

