




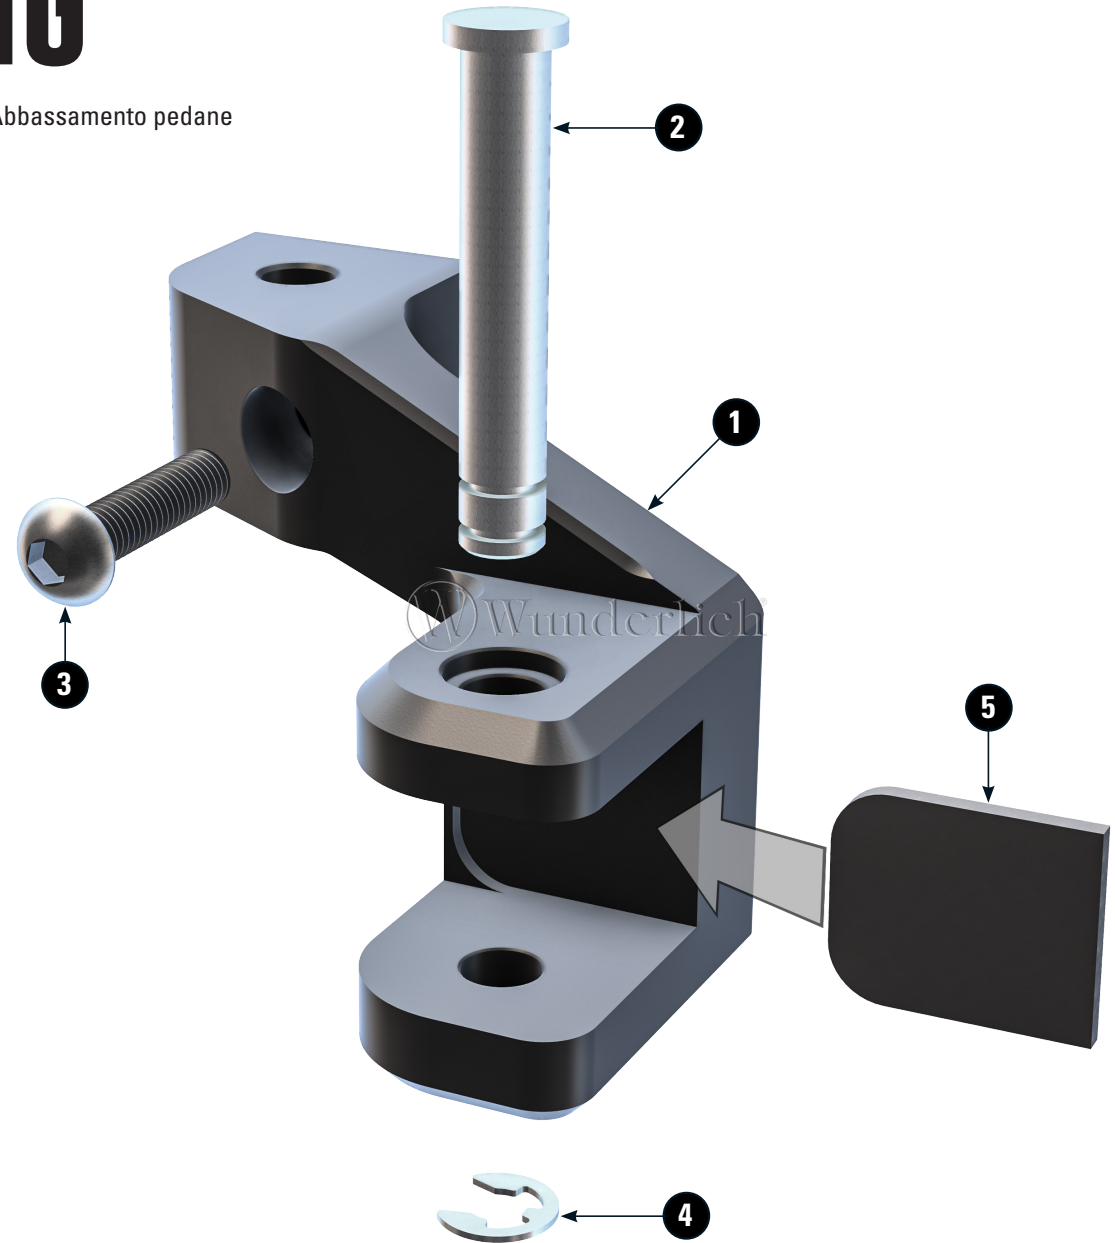

# RASTENVERLEGUNG



Footrest lowering | Abaissement des repose-pieds | Adaptador para bajar estriberas | Abbassamento pedane

Art.-Nr: 90321-002



## LEGENDE/KEY/FILE LÉGENDE

-  **Anbau Tipp**  
Fitting tip  
Astuce de montage
-  **Achtung**  
Attention  
Attention
-  **Vergrößerung**  
Magnification  
Grossissement
-  **Montagepaste**  
Fitting lubricant  
Lubrifiant de montage

-  **Schraube**  
Screw  
Vis
-  **Schraubensicherung**  
Thread locking fluid  
Freinfilets
-  **Drehmoment**  
Torque  
Torque
-  **Reiniger**  
Cleaner  
Nettoyant



#	Bauteil component composant	DE Die Farben der Abbildungen dienen nur der Veranschaulichung. EN The colors are for illustrating purposes only. FR Les couleurs utilisées sont à titre indicatif seulement.	DIN	ISO	Menge quantity quantité
1	Rastenverlegung (links/rechts) / Footrest lowering (left/right)				2
2	Bolzen / Pin				2
3	Linsenkopfschraube / Lens head screw M6x25		7380	7380	2
4	Sicherungsclip / Locking clip 6mm		6799	6799	2
5	Gummipuffer (selbstklebend) / Rubber pad (self-adhesive)				2

